



Laminate Flooring Installation Guide

Click System

Care & Maintenance Instructions

You have purchased a high-quality laminate flooring product that does not require any special treatment directly after installation. It's important to note that regular care and maintenance responsibilities are required to better preserve your floor. If you follow these general cleaning and required maintenance guidelines your new floor will perform as intended for many years to come.

- Please ensure that an ideal room-climate is maintained whenever possible. Ideal conditions would provide for approximately, 45-60% Air Humidity and 21-25°C room temperatures. This is a comfortable range for indoor climate and provides for optimal health and assists in the overall performance of the floor.
- **Do not expose laminate flooring to direct sunlight, please use sun blinds or window / door coverings to protect the laminate flooring from excessive UV heat exposure.**
- Daily cleaning should be done with a vacuum cleaner, static mop or a smooth floor-broom. Any sand or dirt should be immediately removed because they can cause scratches and damage the floor surface. Please ensure no metal screws or sharp edges are evident on the vacuum head. Water or food spillage should be cleaned up as soon as possible.
- Whenever necessary, the floor surface can be cleaned with a well-rung damp-dry mop. Do not use conventional household floor cleaning solutions or detergents, they are abrasive and will damage the surface coating. Never use traditional wax or steel-wool on your laminate floor. PH neutral cleaning solutions are required, please observe and follow manufacturer's instructions.
- It is vitally important that you affix felt strips or suitable protection under any furniture-bases, chair-legs and commonly movable objects. At entry points and for high traffic areas the use of floor mats to remove entry grit and dirt is recommended and will be very useful to help preserve your floor surface coating. **Do not drag or push heavy items across the surface of the laminate floor.**
- **Roller or castor chairs should not be used directly on the floor surface.** Protective mats must be placed on the floor surface.
- Additional surface coatings are not required for your pre-finished laminate floor. Once installed it's ready to walk on.
- In case of any plank damage on the surface (e.g. by furniture movement etc.), it is possible to remove damaged planks by pulling up the surrounding area and re-fitting a new plank. Professional advice and assistance from a qualified installer or specialist retailer could assist if the situation arises.



HTT Flooring Pty Ltd

Office: 8322 8924